

# Installation instructions

## Layout P1615 - Face Bracket Mounts


### Congratulations!

on the purchase of your pleated blinds from Window Fashion.

These blinds have been custom-made in Germany, using only high-quality materials to your precise specifications.

Please follow the installation and care instructions given below to ensure an excellent fit and a long life for your pleated blinds.

We wish you every enjoyment and success with your new blinds.

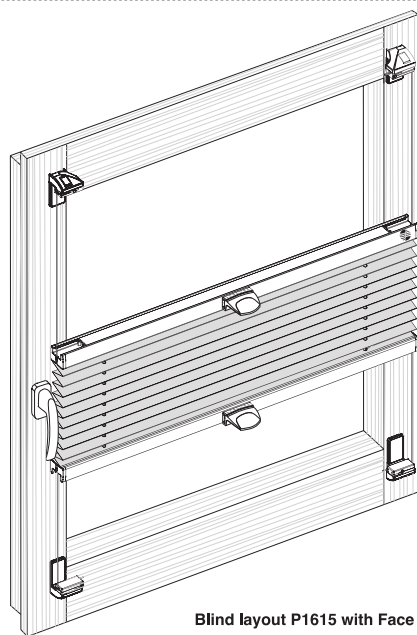


Blind layout P1615 with Face Bracket Mounts

### Positioning: architrave, wall or window frame sash


The outside edges of the blind align with those of the Face Bracket Mounts. Place the blind into position on the architrave, wall, or window frame sash (timber windows only), and mark the position with a pencil.

NOTE for installation on timber surfaces: Timber is a natural material. Ensure that brackets are installed with sufficient distance to edges, to avoid splitting or splintering.

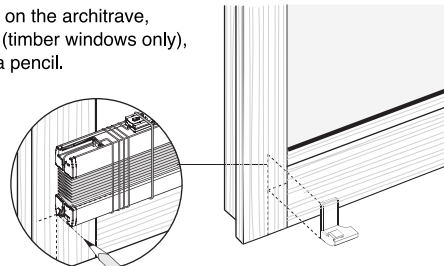


### Installation of the Face Bracket Mounts

#### ① Variant A (upper)

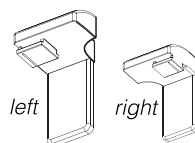

#### Variant B (upper)

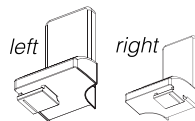


#### ② Position Face Bracket and tighten screws carefully


(pre-drilling may be required)

#### ③ Slide on bracing attachment


Slide on bracket cover

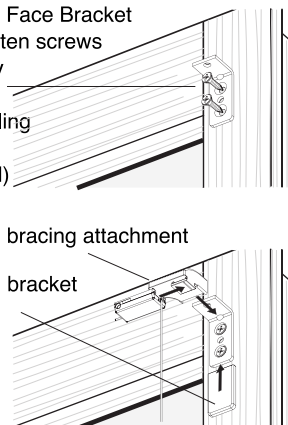

#### ① Variant A (lower)

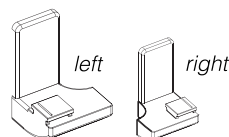

#### Variant B (lower)

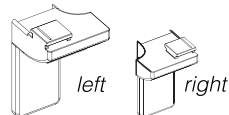

#### ②



Position Face Bracket and tighten screws carefully

(pre-drilling may be required)

#### ③

Slide on bracket cover


Slide on bracing attachment

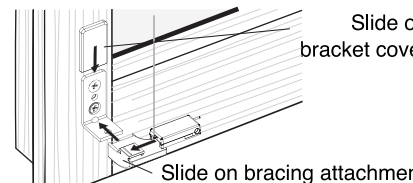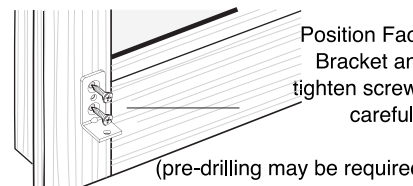

### Fitting the blind


Remove rubber bands. Unwind cord including bracing platelet.

Attach upper bracing platelets first.

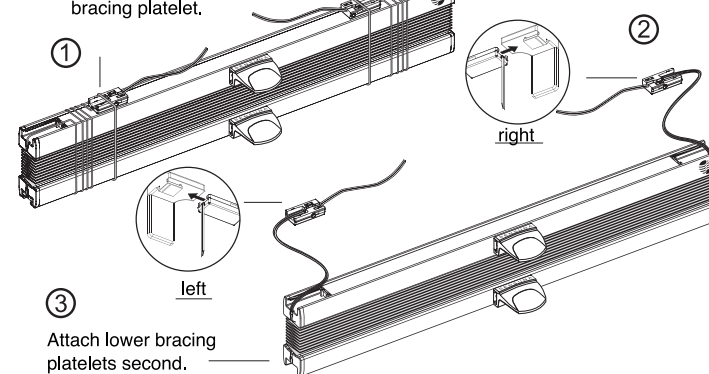

### Blind operation

Use the operating handles to raise and lower the braced cordless blind.

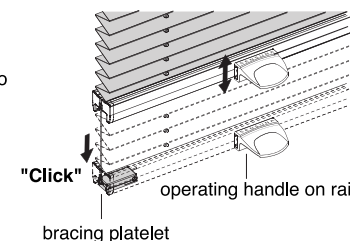


After performing a function check, the overhanging cords can be cut off.

### Adjusting blind tension

To adjust the tension of the blind, remove the blind from the window. Loosen the screws in the lower bracing platelets with the supplied allen key and adjust the length of the tension cords equally on both sides (a pencil mark on the cords may help). Tighten the screws and re-fit the blind to the window.

### Contents:

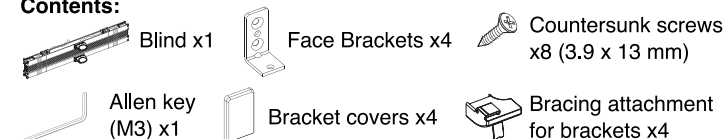

**Please read the following advice carefully prior to installation**

Improper installation can cause injury. Blind must be installed according to instructions, using the supplied components.