Installation instructions


Layout P1615 - Horizontal Mounts

Congratulations! on the purchase of your pleated blinds from Window Fashion.

These blinds have been custom-made in Germany, using only high-quality materials to your precise specifications.

Please follow the installation and care instructions given below to ensure an excellent fit and a long life for your pleated blinds.

We wish you every enjoyment and success with your new blinds.

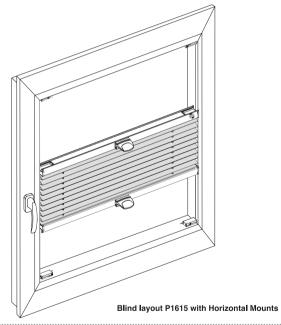


Please read the following advice carefully prior to installation

Improper installation can cause injury. Blind must be installed according to instructions, using the supplied components.

Positioning in the window reveal or glazing bead

The outside edges of the blind align with those of the Horizontal Mounts. Place the blind into position in the window reveal or the glazing bead and mark the position with a pencil.


NOTE: For installation in the glazing bead, retain a minimum distance (fabric dependent) to the window glass to avoid damage. Use the installation quide to assist in measuring.




Installation of Horizontal Mounts



Slide Horizontal Mount into installation guide



Place Horizontal Mount and installation guide into position and align with pencil mark.



(3)


Tighten screw carefully by hand.



(4) Slide bracing platelet onto Horizontal Mount (see next section).




Fitting the blind

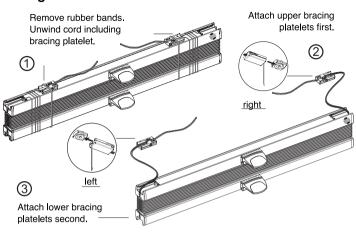

Blind operation

Use the operating handles to raise and lower the braced cordless blind.





After performing a function check, the overhanging cords can be cut off.

Adjusting blind tension

To adjust the tension of the blind, remove the blind from the window. Loosen the screws in the lower bracing platelets with the supplied allen key and adjust the length of the tension cords equally on both sides (a pencil mark on the cords may help). Tighten the screws and re-fit the blind to the window.



Screws x4 (3.9 x 13 mm)



Horizontal Mounts x4







